

ST290 Data Display - quick reference guide

ST290 Data Display Alarm pages

Alarm pages enable you to set alarm modes & thresholds


You can use alarm pages to:

- Set the operating mode of each Alarm, either OFF, ON or for operation with an Auxilliary (external) alarm unit.
- Set the threshold of each Alarm, to define when the Alarm will operate.

Note: Where examples are required, this guide uses the High Apparent Wind Angle Alarm. The principles are valid for all Alarms.


How to see Alarm pages

1. Enter the ALARMS chapter

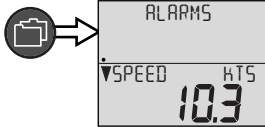

Note: This example shows how to see FAVORITE pages in the upper display area. The same principles are valid for the lower display area.

2. Select the Alarm page you want

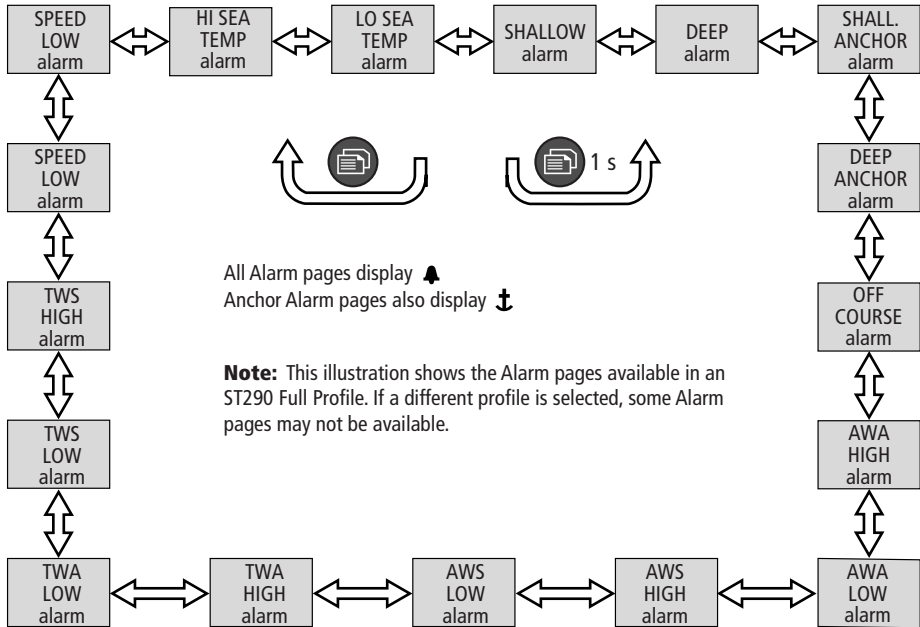

All Alarm pages display ▲
Anchor Alarm pages also display ▼


Note: This illustration shows the Alarm pages available in an ST290 Full Profile. If a different profile is selected, some Alarm pages may not be available.

D6305-1


ST290 Data Display Alarm pages


How to set the Alarm mode

1.

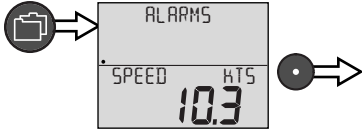


2.

Use  to select the Alarm you want to set up

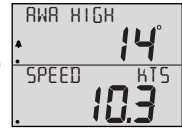


3.

Switch the alarm OFF

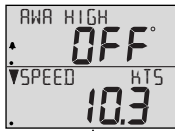


Switch the alarm ON

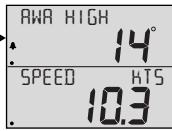


Auxiliary alarm indicator

Set the alarm to operate with an Auxiliary alarm unit

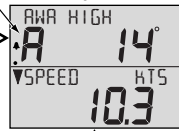


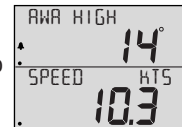
How to adjust Alarm levels

1.

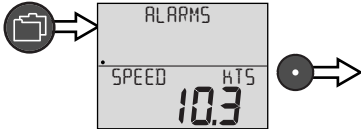


2.

Use  to select the Alarm you want to set up






3.

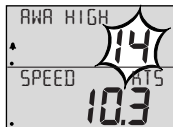Hold down  for 1 s to enter setup mode.




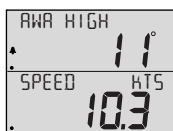
4.

Use  or  to set the alarm value you want

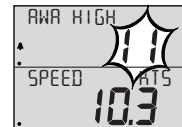

5.

Hold down  for 1 s to leave setup mode and save the alarm value you have set.



6.

Repeat steps 2 to 5 for each Alarm you want to set up.

D6306-1