# ST290 Data Display - quick reference guide

ST290 Data Display FAVORITE pages

The **FAVORITE** chapter gives **quick, easy access** to data you use most often

- You can set any number of FAVORITE pages from 1 to 5.

- You can set up the linking between upper and lower FAVORITE pages:
  - **EITHER** so that you have 5 FAVORITE pages in the upper display area and another independent 5 FAVORITE pages in the lower display area.
  - **OR** so the upper and lower display areas as linked FAVORITE pages, i.e. they change together.
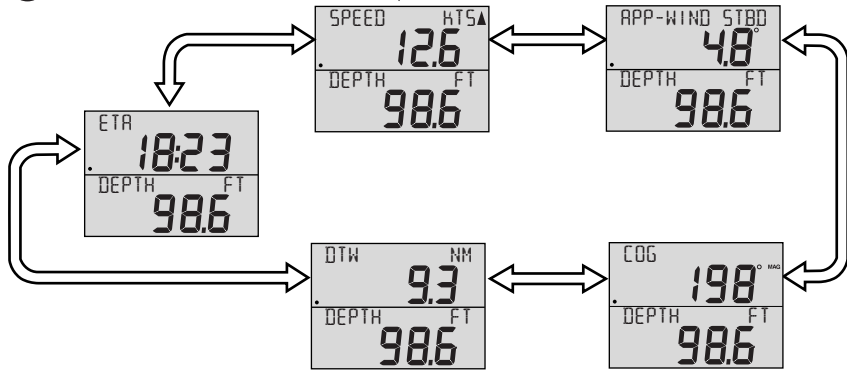
- You can allocate any available data to a FAVORITE page.

To see your FAVORITE pages

FAVORITE U

DEPTH   FT
98.6
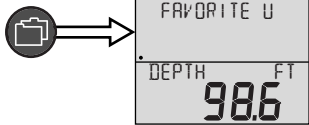
Note: This example shows how to see FAVORITE pages in the upper display area. The same principles are valid for the lower display area.

FAVORITE chapter

If the FAVORITE pages do not roll around automatically, one after the other, use to manually select pages.
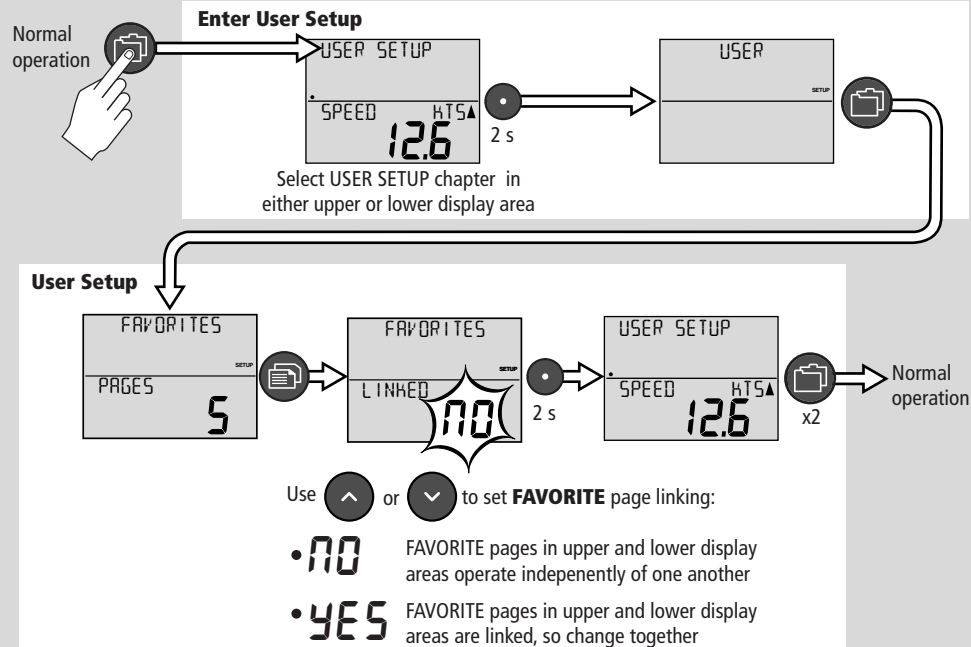
SPEED   KTS▲
12.6
DEPTH   FT
98.6

APP-WIND STBD
4.8°
DEPTH   FT
98.6

ETA
18:23
DEPTH   FT
98.6

DTW   NM
9.3
DEPTH   FT
98.6

COG   ° MAG
198
DEPTH   FT
98.6

D6294-1

Raymarine
ON BOARD

How to set the number of FAVORITE pages

Enter User Setup

Normal operation

USER SETUP

SPEED KTS▲
12.6

2 s

Select USER SETUP chapter in either upper or lower display area

USER

SETUP

User Setup

Use

∧ or ∨

to set number of **FAVORITE** pages (from 1 to 5)

FAVORITES

SETUP

PAGES
5

2 s

USER SETUP

SPEED KTS▲
12.6

x2

Normal operation

How to set FAVORITE page linking

Enter User Setup

Normal operation

USER SETUP

SPEED KTS▲
12.6

2 s

Select USER SETUP chapter in either upper or lower display area

USER

SETUP

User Setup

FAVORITES

SETUP

PAGES
5

FAVORITES

SETUP

LINKED
NO

2 s

USER SETUP

SPEED KTS▲
12.6

x2

Normal operation

Use ∧ or ∨ to set **FAVORITE** page linking:

• NO — FAVORITE pages in upper and lower display areas operate indepenently of one another

• YES — FAVORITE pages in upper and lower display areas are linked, so change together

D6295-1

How to set up what you see on the FAVORITE pages

Enter User Setup

Normal operation

USER SETUP

SPEED KTS▲
12.6

2 s

Select USER SETUP chapter in either upper or lower display area

USER

SETUP

User Setup

FAVORITES

SETUP

PAGES
5

FAVORITES

SETUP

LINKED
NO

Indicates you can set **FAVORITE** data for upper screen area

Indicates you can set **FAVORITE** data for lower screen area

FAVORITES ▲
P1
SETUP
AV SPEED KTS

Use ∧ or ∨

to set **FAVORITE** data in upper display area

▼ FAVORITES
P1
SETUP
DEPTH FT

2 s

Use ∧ or ∨

to set **FAVORITE** data in lower display area

Repeat for all FAVORITE pages

USER SETUP

SPEED KTS▲
12.6

x2

Normal operation
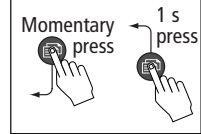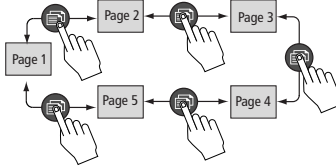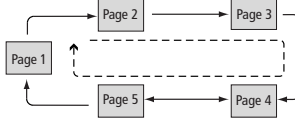
D6296-1

How to set the method of selecting FAVORITE pages

You can set the method of selecting FAVORITE pages. This is:

- **Either** so you manually select pages using
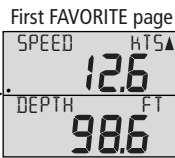
Page 1 → Page 2 ← Page 3 → Page 4 ← Page 5 → Page 1

Momentary press | 1 s press

- **Or** so the **FAVORITE** pages roll around automatically.

Page 1 → Page 2 → Page 3 → Page 4 ← Page 5

FAVORITE chapter

FAVORITE U
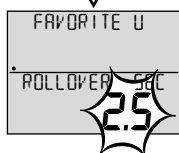DEPTH FT 98.6

First FAVORITE page
SPEED KTS 12.6
DEPTH FT 98.6

1 s

FAVORITE setup

Note: The method of FAVORITE page selection that you choose, will apply to FAVORITE pages in both the upper and lower display areas.

FAVORITE U
ROLLOVER SEC 2.5

1 s

Use ∧ or ∨

to set the method of **FAVORITE** page selection:

- If you want to select **FAVORITE** pages manually, set the value to 0.0
- If you want **FAVORITE** pages to roll around automatically, set the time you want each page to be displayed (from 0.5 s to 20 s)

D6297-1

Raymarine ON BOARD